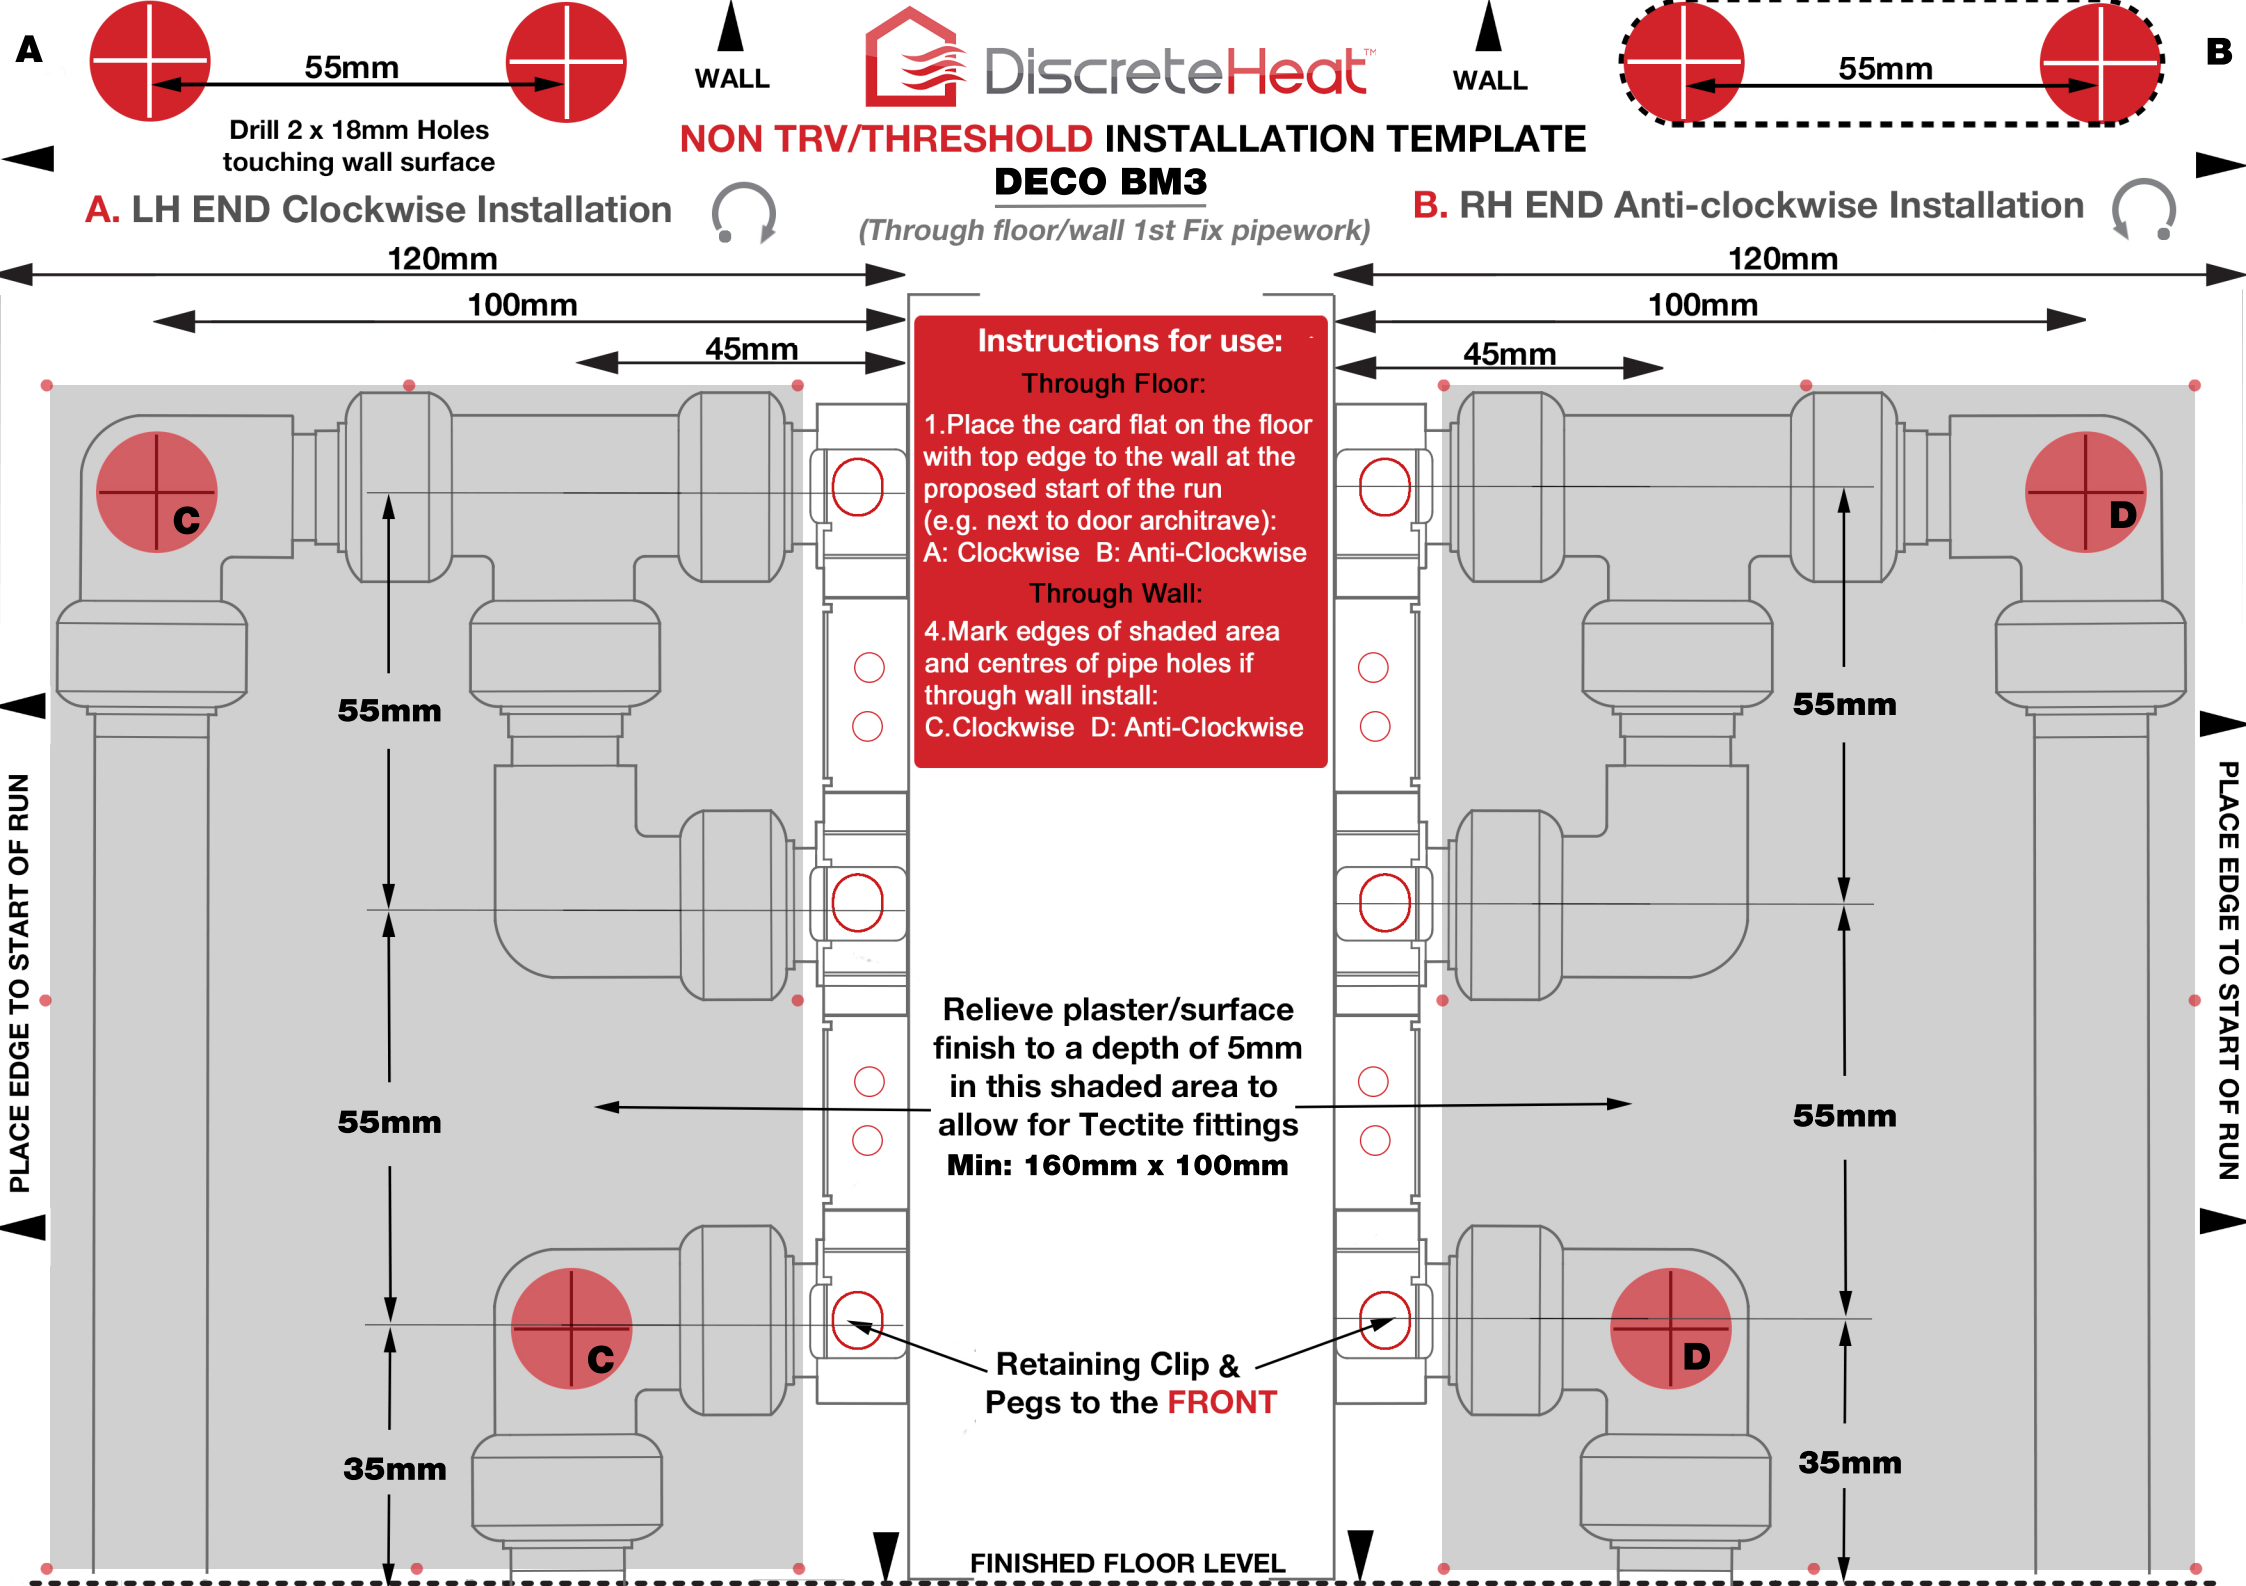
A
55mm
Drill 2 x 18mm Holes
touching wall surface
WALL
DiscreteHeat™
WALL
55mm
B
NON TRV/THRESHOLD INSTALLATION TEMPLATE
DECO BM3
(Through floor/wall 1st Fix pipework)
A. LH END Clockwise Installation
B. RH END Anti-clockwise Installation
120mm
100mm
45mm
120mm
100mm
45mm
Instructions for use:
Through Floor:
1.Place the card flat on the floor with top edge to the wall at the proposed start of the run (e.g. next to door architrave):
A: Clockwise B: Anti-Clockwise
Through Wall:
4.Mark edges of shaded area and centres of pipe holes if through wall install:
C.Clockwise D: Anti-Clockwise
C
D
55mm
55mm
55mm
55mm
Relieve plaster/surface finish to a depth of 5mm in this shaded area to allow for Tectite fittings
Min: 160mm x 100mm
C
D
35mm
35mm
Retaining Clip & Pegs to the FRONT
PLACE EDGE TO START OF RUN
PLACE EDGE TO START OF RUN
FINISHED FLOOR LEVEL